


## 82-90 Chev. S10 Headlight Relocators

**For upgrading your grille to 91-93 p/u or 91-94 Blazer/Jimmy**

- 1. Remove factory grille and headlamp assemblies. Leave the existing headlamp adjusting grommets/ nuts intact on the radiator support. Save all other nuts and screws.**
- 2. Install the two relocators simply by inserting the old adjuster screws (2 per side) through the 1/4" holes of the relocator brackets and into the adjusting grommets/ nuts and tighten. MAKE SURE THE LONGER END IS ON THE TOP! These will fasten the relocator brackets to the radiator support.**
- 3. Now assemble the new headlamp buckets on the new installed brackets and adjust headlamps for proper settings. Install the new 91-93 grille on your radiator support. Note that on some models the grille mounting holes are different and you may have to drill new holes on the radiator support. Make sure that before drilling you align the grille with the new headlamps, mark first and drill or use sheetmetal or self-tapping screws (not included).**

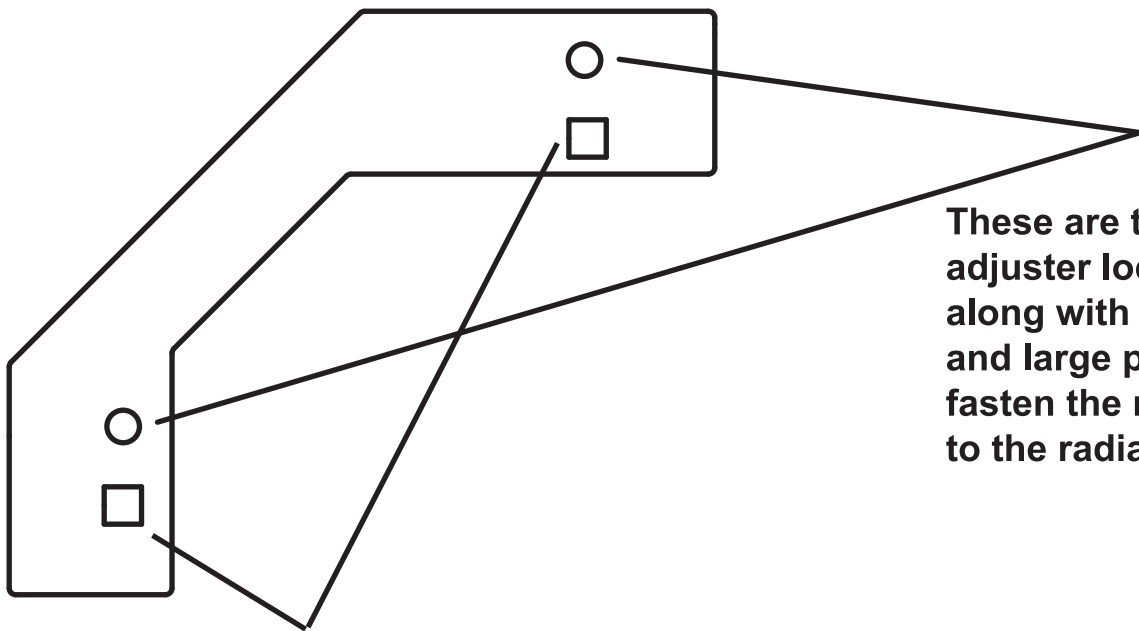

**These are the old headlight adjuster locations. Use them along with the large screws and large plastic nuts to fasten the relocator brackets to the radiator support.**

**These are the new headlight adjuster locations. Use them along with new screws and small plastic nuts to fasten the relocator to the new headlamp buckets.**

**Fender Bender International, Inc.  
2700 Mercantile Dr. Ste. 900A  
Rancho Cordova, CA 95742  
(877) FBI MINI  
[www.fbirides.com](http://www.fbirides.com)**